


These are the three mdf frets containing your new house.

Make sure all the parts are there.

Roof section, plain gable end, timber frame gable end, long wall timber frame, wall and door timber frame.

Base, 2 long plain walls, rear wall with windows, front wall with windows and door.

Roof section, plain gable end, timber frame gable end, long wall timber frame, short rear wall timber frame.

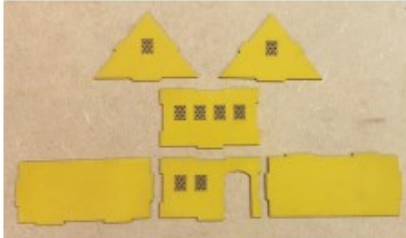

Find all the plain wall sections from the mdf frets supplied. Decide upon your choice of colour for the walls. I chose a mustard colour. White or cream are also popular. Paint and leave to dry. Paint the 'leaded' windows if you like. I chose black for this.




You could, if you wish, paint the door at this stage. I chose to leave it the colour of the mdf to represent a wooden door

Now select the colour for your timber framework.

I chose black but brown is also popular.

Paint the timber frames and leave to dry.

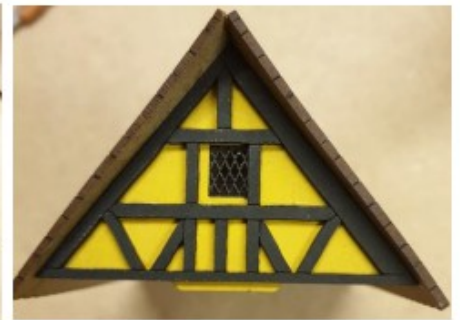

Glue the plain triangular ends to the two roof sections to form the roof.

When dry glue the timber frame to both gable ends.

Glue the ridge piece across the ridgeline of the roof. This can be fiddly, so take your time and make sure it is in place.

Glue all four plain wall sections to the base plate. Allow to dry.

When dry, glue the timber frames to all four walls. Make sure you have the 'small box' design to the top on all four walls.

Once everything is dry, your new Tudor style house is complete.