

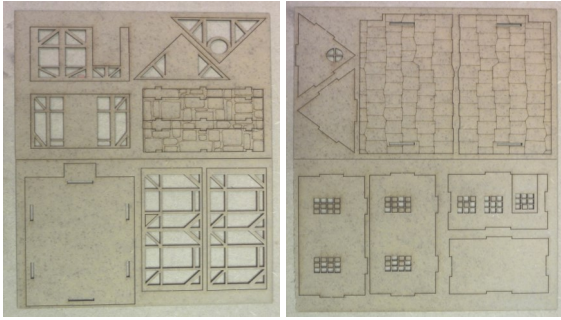


T4B



Small Tudor Style House Instruction Sheets

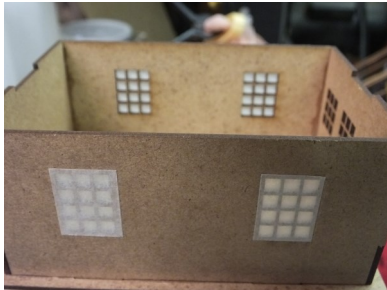


Use the base and four plain wall sections from the two mdf frets supplied. Glue together these pieces shown in the image to the right, to form the 'inner' walls and floor of the building.

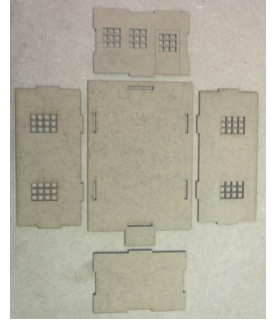

At this point consider painting the inner structure. I did mine white as an example and also masked off the windows using masking tape cut to size. This will leave 'wooden' effect window frames when removed.

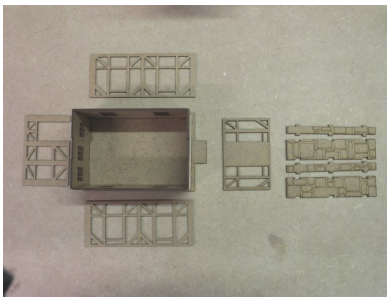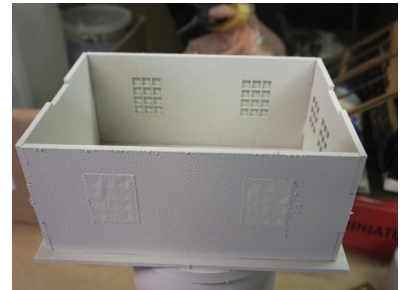


Detach the wooden frameworks from the mdf fret. At this point consider painting them before gluing them to the walls. I did mine black, but dark brown could also be considered.

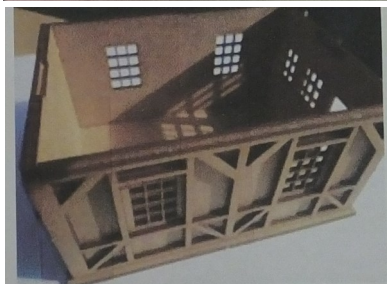

Also glue the four pieces of the chimney together.

Then glue the framework sections to the 'inner' walls and attach the chimney to the tab on the base.

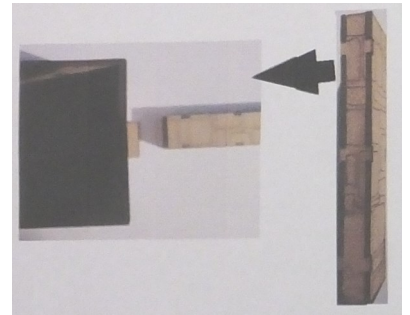

Glue the plain triangular ends to the two roof sections to form the roof.

At this point consider painting the ends of the roof white and the frameworks black or dark brown. Then glue the triangular frameworks to the triangular ends of the roof.

Your Small Tudor Style House is now complete.

Congratulations

