

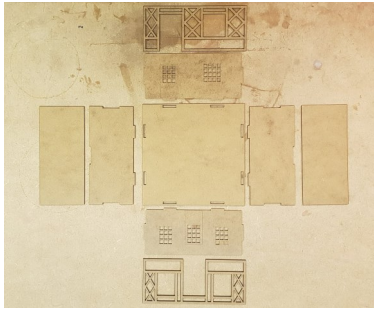




Modular House Instruction Sheets

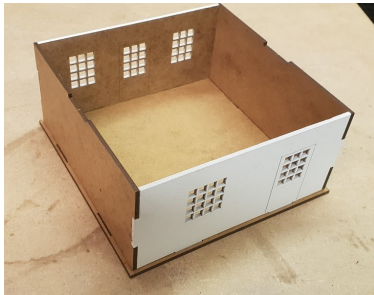

The ground floor is made up from the pieces shown on the left. Note the walls are double thickness. Front and back walls have frames on the outside. Left and right walls have plain outsides. All inner sides have tabs to locate into the floor plate. Glue together these pieces shown in the image to the right, to form the 'inner' walls and floor of the building.

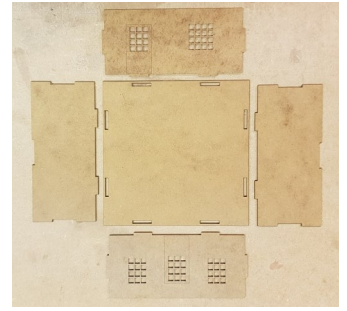

At this point consider painting the inner structure. I did mine white as an example. There is no need to paint the plain walls at this stage as they will be covered by the outer walls later. You could paint the walls that have windows and doors white before assembly if you wish. Glue the parts shown to the right to make up the chimney. Again pre-painting is an option.

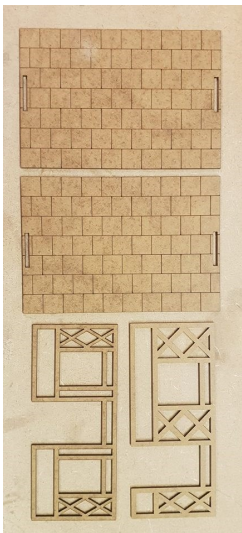
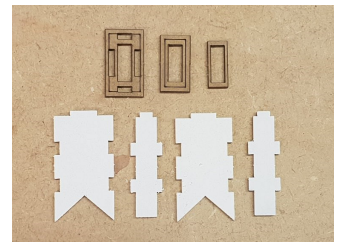


At this point consider painting the frames of the building and the roof tiles. Black is a common option or brown for the frames. Any typical tile colour for the roof.

Then glue the roof sections to the triangular gable ends with tabs on all three sides. Dry fit several times to make sure the roof is correct. It is easy to glue the roof together with uneven overlaps. Once happy glue together. You will note the hefty bead of glue along the ridge in the picture, this is to strengthen that join a little.



Glue the chimney together and paint or pre-paint.

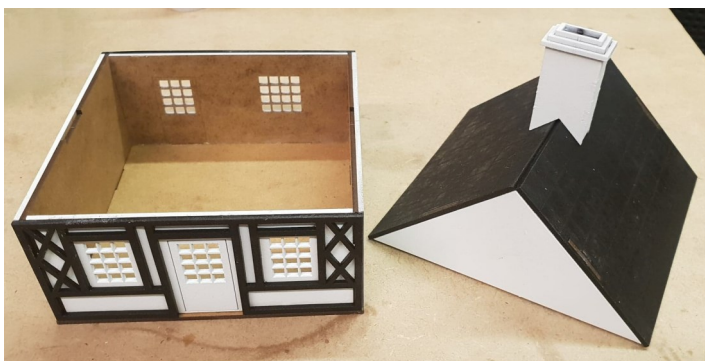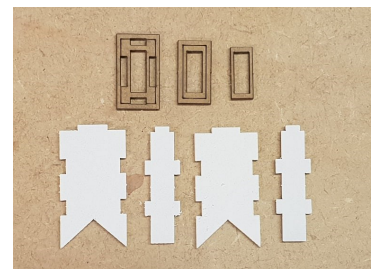

To complete the building glue the frames and plain outer sides to the bottom level.

Then glue the plain triangular gable ends to the roof.

Finally, glue the chimney to the roof.

Your Small Tudor Style House is now complete.

Congratulations

